

spout

Cheat Sheet

Front Status Light:

- Blue = High Power (~640W)
 - Green = Eco Mode (~340W)
 - White = Off (~10W)
-

IF BLINKING

- **Blue — Leak sensor**
Reinstall Filter Securely
Tilt machine forward to clear water
 - **Purple — Pump error**
Restart. Hold front Left button 5 sec.
Still? Contact us with email below.
 - **Red — Overheating**
Turn off, wait 10 minutes.
 - **Green — Tilted**
Place on flat surface.
 - **Pulsing White**
Pitcher not connected.
Pull out pitcher, replace after 10 sec.
-

RING LIGHT

White = Normal **Red** = Change filter
Blue = Pitcher full

AFTER CHANGING FILTERS

**Hold RIGHT Button
for 5 seconds**

Resets 3 month filter timer and red light.

FIRST USE OF NEW FILTERS

Discard first 4 pitchers.

Smell is normal on first run.

DO wash pitcher by hand weekly.

HOW TO CHANGE THE FILTERS



Scan this QR CODE

Other Issues?
Email us any time

contact@spoutwater.com